



70062

MobiCam[®] Digital

Wireless Monitoring System



Quick Start Guide

CAMERA SETUP

1. Plug the connector of the AC adaptor to the DC power input in the back of the Camera.
2. Plug the AC adapter to a wall socket nearest to the location you wish to place the camera.
3. Press the power button on the front of the camera for about 1 second or until the power light turns on.
4. Make sure the VOX switch, on the bottom of the camera, is in the desired On or OFF position. (If you wish to use the Voice Activated Picture and Sound feature, please refer to your owner's manual.)
5. Select the preferred Night Light Mode Setting.


ON – The Night Light will remain ON.

AUTO – The Night Light will turn on automatically in the dark.

OFF – The Night Light will remain OFF.

6. Tilt & position the Camera to get the best view of the area you are monitoring.

- 13 - Night Light
- 14 - IR Night Vision LED's
- 15 - Lens
- 16 - Microphone
- 17 - Light Sensor
- 18 - Power ON/OFF with LED
- 19 - Link/Code Key
- 20 - DC Power Input
- 21 - Night Light Mode Switch
- 22 - Voice Activation (VOX) Switch

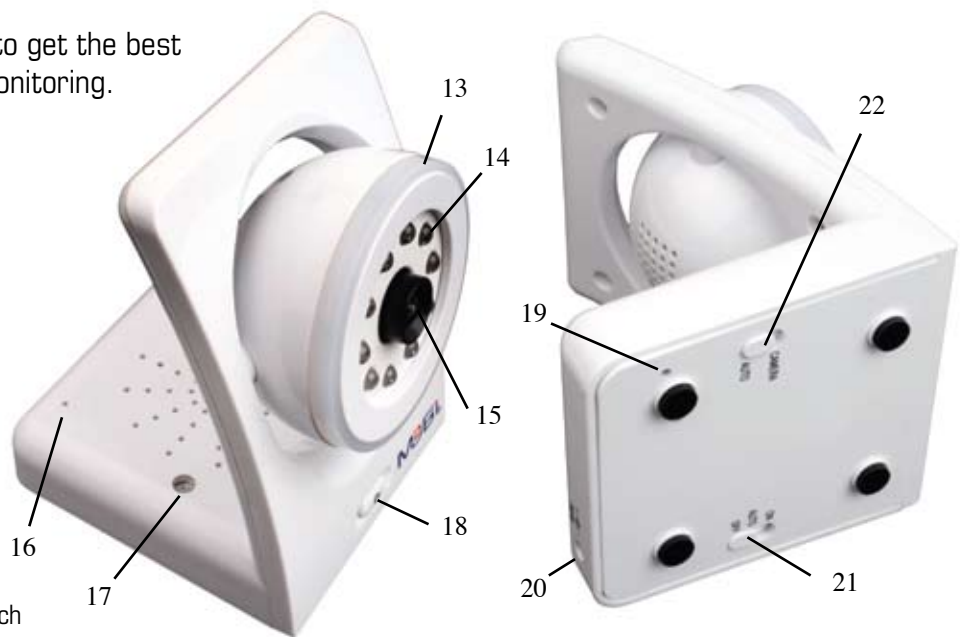



MobiCam[®] Digital Wireless Monitoring System



Quick Start Guide

MONITOR SETUP

1. The MobiCam[®] Digital Wireless Monitor is designed to be powered by either the built-in rechargeable batteries or the provided AC/DC adaptors. We recommend charging the Monitor for at least 8 hours before operating the unit in battery mode. Reconnect the monitor to the adaptor whenever possible to maintain battery life.
2. Make sure the LCD switch (5), located on the right hand side of your monitor, is in the ON position.
3. Make sure the channel selector on the back of your monitor is set to channel A. Your monitor will automatically link up to your camera. (If you wish to link and use more than one camera, please refer to your owners Instruction Manual.)
4. Adjust the volume and brightness of the screen by using the control buttons on the front of your monitor to the desired setting.

To tilt your LCD screen up from the monitor housing, gently press down the right LCD frame corner in place before pressing the LCD Release Button located under the monitor. The screen will pop up slightly and ready for adjustment to your desired angle. (As with any electronics screen use gentle force to avoid damaging the display.)



- | | |
|----------------------------|---------------------------------|
| 1 - 2.4" Color LCD Screen | 7 - DC Power input |
| 2 - Volume Control | 8 - Speaker |
| 3 - Brightness Control | 9 - Tilt Screen Release |
| 4 - Power ON LED Indicator | 10 - Antenna |
| 5 - LCD and Power ON/OFF | 11 - Channel Selector/Scan Mode |
| 6 - AV Output | 12 - Battery Door |